# Copeland<sup>®</sup> Digital Compressor Controller



## Low Voltage Terminals

24 COM Module Power

24 VAC Module Power

C1 Demand Input -

C2 Demand Input +

P1 Pressure Common

P2 Pressure Input

P3 Pressure Power 5VDC

P4 Pressure Shield

P5 Pressure Output -

P6 Pressure Output +

T1 Discharge Temp Sensor

T2 Discharge Temp Sensor

## High Voltage Terminals

A1 Alarm Relay Out

A2 Alarm Relay Out

L1 Control Voltage N

L2 Control Voltage L

M1 Contactor M2 Contactor

U1 Unloader Solenoid

U2 Unloader Solenoid

V1 Vapor Injection Solenoid

V2 Vapor Injection Solenoid

All high voltage terminals rated 24-250 VAC

### **LED Descriptions**

Green LED - 24VAC Power
Yellow LED - Unloader Solenoid On
Red LED - ALERT Flash Code

- Flashing Green LED indicates anti-short cycle timer active
- All LEDs flashing at same rate indicates 24VAC supply too low for operation
- All LEDs solid at same time indicates controller failure
- Reset ALERT code by removing 24VAC supply to module
- All ALERTs close alarm relay contacts
- All ALERTs deenergize contactor and solenoids except Code 6
- Compressor always unloads for 0.1 second at startup
- Compressor only starts when Demand signal input is above 1.45 VDC and no ALERTs are present

#### Troubleshooting ALERT Flash Codes

Code 1 Reserved for future use

Code 2 High Discharge Temperature

Discharge thermistor above trip set point or thermistor short circuited. Resets after 30 minutes and motor cools down.

Code 3 Compressor Protector Trip

No compressor current is detected when compressor should be running. Resets when compressor current is detected.

Code 4 Locked Rotor

Locked rotor condition is detected. Reset after 30 minutes.

Code 5 Demand Signal Loss

Demand input signal is below 0.5VDC. Resets after demand input signal rises above 1.0VDC.

Code 6 Discharge Thermistor Fault

Thermistor is not connected. Reset by reconnecting thermistor.

Code 7 Reserved for future use

Code 8 Compressor Contactor Fault

Compressor current is detected when compressor should be off. Resets when current is no longer detected.

Code 9 Low 24VAC Supply

Supply voltage to module has dropped below 18.5VAC. Resets after voltage rise above 19.5VAC.