


# Copeland™ Outdoor Refrigeration Unit X-Line Series

## Wind Baffle Attachment Instructions

1. Ensure the unit is powered off; then remove the side screws (circled in the photo shown below).

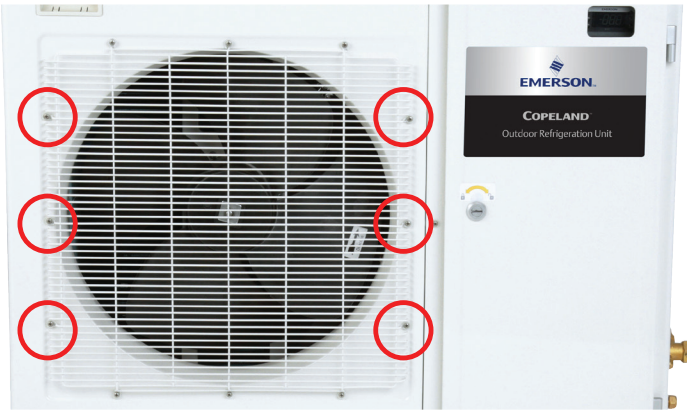

2. Set the wind baffle in the indentation between the fan guard and the unit by sliding from the top to the bottom.



3. Begin screwing in the provided screws/washers. Start at the upper corners with the washer between the screw head and fan guard. It is recommended using an attachment on a screw driver to increase reach/ease of use.
4. Screw in the final four screws into the sides, attaching the wind baffle to the unit (example in the photo below).

