


Application Guidelines

Copeland™ Scroll Variable Speed Horizontal Refrigeration Compressors for R290 Applications

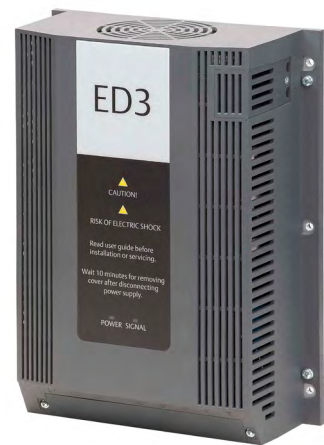

About these guidelines	1
1 Safety instructions	1
1.1 Icon explanation	1
1.2 Safety statements	2
1.3 General instructions	2
2 Product description	3
2.1 Product range	3
2.2 Matched pairs of compressor and drive.....	3
2.3 Variable speed advantages	4
2.4 Compressor nomenclature.....	4
2.5 BOM Variations	5
2.6 Application considerations	5
2.6.1 Qualified refrigerant and oil	5
2.6.2 Oil filling and oil level.....	5
2.6.3 Test procedure	6
2.6.4 Application limits – Operating envelope	7
2.6.5 PED category & maximums allowable pressure PS, temperature and relative humidity	9
2.6.6 Admissible temperature and relative humidity ranges	9
2.6.7 Design features	9
2.7 Dimensions	10
3 Installation	11
3.1 Compressor and drive handling.....	11
3.1.1 Compressor transport and storage	11
3.1.2 Compressor positioning and securing.....	11
3.1.3 Installation location.....	11
3.2 Compressor mounting parts	11
3.3 Compressor brazing procedure	12
3.4 Pressure safety controls	13
3.4.1 High-pressure protection	13
3.4.2 Low pressure protection.....	13
3.5 Crankcase heating function	13
3.6 Discharge gas temperature protection.....	14
3.6.1 Excessive discharge gas temperatures	14
3.6.2 Compressor discharge gas temperature protection.....	14
3.7 Filter screens	15
3.8 Mufflers	15
3.9 Sound shell	15
3.10 Insulation material.....	15
3.11 Reversing valve	15

3.12	Sound and vibrations	16
3.13	Suction accumulators.....	17
4	Electrical connection	18
4.1	General recommendations.....	18
4.2	Electrical installation	18
4.3	Terminal connections.....	20
4.3.1	<i>Molded plug connection</i>	<i>20</i>
4.3.2	<i>Assembly of the molded plug cable</i>	<i>21</i>
4.3.3	<i>Removing the molded plug power cable</i>	<i>21</i>
4.4	Motor windings.....	22
4.5	Motor insulation.....	22
4.6	Protection devices.....	22
4.7	High-potential testing	22
5	Start-up & operation.....	23
5.1	Strength-pressure test	23
5.2	Compressor tightness test	23
5.3	System evacuation.....	23
5.4	Preliminary checks – Pre-starting	24
5.5	Charging procedure	24
5.6	Run-in time.....	25
5.7	Initial start-up	25
5.8	Start-and-stop routine	25
5.9	Starting sound.....	25
5.10	Deep vacuum operation.....	25
5.11	Shell temperature.....	25
5.12	Pumpdown cycle.....	25
5.13	Minimum run time	26
5.14	Shut-off sound.....	26
5.15	Oil level	26
6	Maintenance & repair	27
6.1	Qualification of workers.....	27
6.2	Preparation and work procedure	27
6.3	Disassembling system components	28
6.4	Replacing a compressor	28
6.4.1	<i>Compressor replacement.....</i>	<i>28</i>
6.4.2	<i>Start-up of a new or replacement compressor.....</i>	<i>28</i>
6.4.3	<i>Compressor return procedure</i>	<i>29</i>
6.5	Exchanging the refrigerant.....	29
6.6	Lubrication and oil removal.....	30
6.7	Oil additives	31

7	Dismantling & disposal.....	32
8	References.....	32
	DISCLAIMER	32

About these guidelines

The purpose of these guidelines is to provide guidance in the application of Copeland™ scroll compressors and Emerson control drives in users' systems working with propane (R290). They are intended to answer the questions raised while designing, assembling and operating a system with these products.

Besides the support they provide, the instructions listed herein are also critical for the proper and safe functioning of the compressors and drives. The performance and reliability of the products may be impacted if they are not used according to these guidelines or are misused.

These application guidelines cover stationary applications only. For mobile applications, please contact the Application Engineering department at Emerson as other considerations may apply.

1 Safety instructions

Copeland scroll variable-speed compressors and Emerson motor control drives are manufactured according to the latest relevant European and US safety standards. Particular emphasis has been placed on the user's safety.

The YBVH* variable-speed compressors and the drives are intended for installation in systems in accordance with the European Machinery Directive MD 2006/42/EC, the Pressure Equipment Directive PED 2014/68/EU, the Low Voltage Directive LVD 2014/35/EU and the Electromagnetic Compatibility Directive EMC 2014/30/EU. They may be put to service only if they have been installed in systems according to instructions and conform to the corresponding provisions of legislation.









NOTE: Only dedicated compressors are allowed to be used with flammable refrigerants. Emerson marks all compressors that are qualified for flammable refrigerants with a sticker indicating the usage of such refrigerants. Systems using flammable refrigerants must be executed correctly while observing safety rules, as specified in corresponding safety standards such as, but not limited to EN 378. They must comply with any and all applicable legislation and regulations. Ensuring compliance remains the user's responsibility.

The Material Safety Datasheet (MSDS) for R290 shall be considered when working with this type of refrigerant – please check this document provided by the gas supplier.

These instructions shall be retained throughout the lifetime of the compressor.

You are strongly advised to follow these safety instructions.

1.1 Icon explanation

 <p>WARNING This icon indicates instructions to avoid personal injury and material damage.</p>	 <p>Fire hazard This icon indicates a risk of flammable atmosphere.</p>
 <p>High voltage This icon indicates operations with a danger of electric shock.</p>	 <p>CAUTION This icon indicates instructions to avoid property damage and possible personal injury.</p>
 <p>Danger of burning or frostbite This icon indicates operations with a danger of burning or frostbite.</p>	 <p>IMPORTANT This icon indicates instructions to avoid malfunction of the compressor.</p>
 <p>Explosion hazard This icon indicates operations with a danger of explosion.</p>	<p>NOTE This word indicates a recommendation for easier operation.</p>
 <p>Danger of explosive atmosphere This icon indicates a risk of explosive atmosphere.</p>	

1.2 Safety statements

- Refrigerant compressors must be employed only for their intended use. The system has to be labelled according to the applicable standards and legislation.
- Only qualified and authorized RACHP (refrigeration, air conditioning and heat pump) personnel are permitted to install, commission and maintain this equipment. Only competent personnel (as specified in EN 13313) qualified for flammable refrigerant handling is permitted to commission, initiate and maintain the compressor/refrigeration systems; non-trained personnel, including the user, are not allowed to do so and must call on an expert.
- The maximum refrigerant charge is specified in standards such as, but not limited to EN 378, EN 60335-2-40 and EN 60335-2-89. The system designer shall implement all safety measures defined by the applicable standards and the maximum refrigerant charge shall not be exceeded.
- If a flammable atmosphere is detected, immediately take all necessary precautions to mitigate the risk as determined in the risk assessment.
- Electrical connections must be made by qualified electrical personnel.
- All valid standards for connecting electrical and refrigeration equipment must be observed.
- The national legislation and regulations regarding personnel protection must be observed.



Use personal safety equipment. Safety goggles, gloves, protective clothing, safety boots and hard hats should be worn where necessary.

1.3 General instructions



WARNING

Pressurized system! Serious personal injuries and/or system breakdown! Accidental system start before complete set-up must be avoided. Never leave the system unattended without locking it out electrically when it is on vacuum and has no refrigerant charge, when it has a holding charge of nitrogen, or when the compressor service valves are closed.



WARNING

System breakdown! Personal injuries! Only approved refrigerants and refrigeration oils must be used.



WARNING

High shell temperature! Burning! Do not touch the compressor until it has cooled down. Ensure that other materials in the area of the compressor do not come into contact with it. Lock and mark accessible sections.



CAUTION

Overheating! Bearing damage! Do not operate compressor without refrigerant charge or without it being connected to the system.



CAUTION

Contact with POE! Material damage! POE lubricant must be handled carefully and the proper protective equipment (gloves, eye protection, etc.) must be used at all times. POE must not come into contact with any surface or material that it might damage, including without limitation, certain polymers, eg, PVC/CPVC and polycarbonate.



IMPORTANT

Transit damage! Compressor malfunction! Use original packaging. Avoid collisions and tilting.

2 Product description

2.1 Product range

These application guidelines cover Copeland™ scroll variable-speed horizontal compressor models YBVH* using R290. These compressors have a speed range of 1500 to 5500 revolutions per minute, corresponding to 25 up to 92 Hz. They are intended for use in refrigeration applications. They feature a three-phase brushless permanent magnet (BPM) motor which is controlled by an Emerson ED3 motor control drive, either single- or three-phase, referred to as the "ED3 drive" or "drive" throughout these guidelines.



Figure 1: YBVH* compressor & ED3 drive

NOTE: For more information on the motor control drive refer to the ED3 User Manual.

Compressor	Cooling capacity* (kW) with R290			
	1500 rpm	3000 rpm	4500 rpm	5500 rpm
YBVH021	0.90	1.75	2.65	3.26
YBVH029	1.20	2.44	3.68	4.49
YBVH046	1.88	4.00	6.07	7.41

* Conditions: refrigerant dew temperature, evaporating temperature: -10 °C; condensing temperature: 45 °C; suction gas superheat: 10 K; liquid sub-cooling: 0 K

Table 1: Cooling capacity in kW

2.2 Matched pairs of compressor and drive

The YBVH* compressors with motor code "E9" are offered in matched pairs with the ED3 drive, designed in accordance with EN 60335-1. The motor protection is implemented in the ED3 drive.

The matched pairs have been designed for maximum efficiency and reliability. The drive will power the compressor, control the compressor running speed, provide compressor and drive protection and communicate with the master controller in Modbus RTU protocol. The drive requires cooling and is typically installed in the unit near the compressor. To optimize drive efficiency and to limit electromagnetic interferences, external chokes must be connected to the single-phase and three-phase drives.

The matched pairs of compressor and drive released by Emerson are listed in **Table 2** below:

Compressor	Drive	Drive power supply	Package code ED3 Modbus [318] # OneEmerson [205]
YBVH021 1U-3E9	ED3011AU	1~ / 230 V / 50 Hz	27
YBVH021 1U-9E9	ED3013BU	3~ / 400 V / 50 Hz	43
YBVH029 1U-3E9	ED3015AU	1~ / 230 V / 50 Hz	29
YBVH029 1U-9E9	ED3013BU	3~ / 400 V / 50 Hz	30
YBVH046 1U-9E9	ED3020AU	1~ / 230 V / 50 Hz	46
YBVH046 1U-4E9	ED3018BU	3~ / 400 V / 50 Hz	32

Table 2: Matched pairs ED3 drive with YBVH* compressors

The YBVH* compressors with motor code "X" listed in **Table 3** are sold as unprotected compressors. They are dedicated for use with a third-party drive. The motor protection is under the responsibility of the system manufacturer/installer.

Compressor	Drive power supply	Output current requirements (A)
YBVH021 1U-3X9	1~ / 230 V / 50 Hz	11
YBVH021 1U-9X9	3~ / 400 V / 50 Hz	13
YBVH029 1U-3X9	1~ / 230 V / 50 Hz	15
YBVH029 1U-9X9	3~ / 400 V / 50 Hz	13
YBVH046 1U-9X9	1~ / 230 V / 50 Hz	20
YBVH046 1U-4X9	3~ / 400 V / 50 Hz	18

Table 3: Unprotected YBVH* compressors

A third-party control system must include discharge temperature protection, current overload protection, and a soft start and stopping routine. Stator heat control is also recommended for optimal performance and reliability. It should also include the operating map parameters. Contact the Application Engineering department at Emerson for compressor motor specifications and speed adjustment requirements.

It is important to ensure correct wiring at both the compressor and drive connections prior to starting the compressor to avoid miswiring or a powered reverse situation. Both situations could potentially cause compressor damage.

NOTE: The output current values given in Table 3 are given as an indication only. For detailed information please contact the Application Engineering department at Emerson.

NOTE: Operate Emerson matched pairs of inverter and compressor only. Other combinations could cause problems, such as starting issues, low capacity operation or other unusual errors.

2.3 Variable speed advantages

The variable-speed scroll is a key component in the variable capacity system. A variable capacity system will use less electrical energy by minimizing On/Off cyclical losses, maximizing heat exchanger efficiency by operating at part load during a majority of the total operating hours, and by operating with reduced airflow rates and blower power.

The variable-speed scroll and drive are suitable for a variety of "best-in-class" applications. Both may be used in other types of applications provided that the envelope and other operating restrictions are met. The primary benefit of this product is to substantially reduce electrical energy consumption and associated expenses.

Additionally, a variable-speed scroll offers the capability of controlling space and domestic hot water temperature to ranges exceeding simple On/Off control, improving overall comfort levels inside the building. The onboard electronics embedded in the drive greatly reduce the possibility of operation outside the designed parameters which in turn increases overall system reliability.

2.4 Compressor nomenclature

The compressor model designation contains the following technical information:

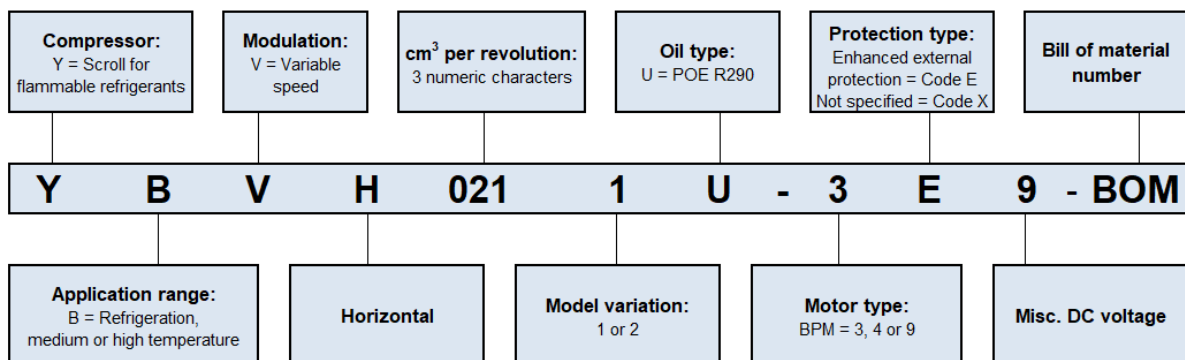


Figure 2: Nomenclature

2.5 BOM Variations

The BOM (bill of material) number at the end of the compressor designation indicates the different compressor layouts and details. YBVH* compressor models are available in the following BOM version:

BOM	Suction and discharge connections	T-Box	Mounting parts	Features
NBE	Brazing stub tubes	Electrical connections ready for molded plug IP65	Without	Horizontal 4-foot housing design

Table 4: BOM variation

Please refer to the Emerson price list for more details.

2.6 Application considerations

2.6.1 Qualified refrigerant and oil

Oil recharge values can be taken from Copeland scroll compressors brochures or Copeland™ Select software available at www.climate.emerson.com/en-gb.

Compressors	YBVH021, YBVH029, YBVH046
Qualified refrigerant	R290
Copeland standard oil	Hatcol 4467 (Ident number 8410785)
Servicing oil	Hatcol 4467 (Ident number 8410785)

Table 5: Qualified refrigerant and oil

2.6.2 Oil filling and oil level

Owing to operation with flammable refrigerant, YBVH* compressors have no oil sight glass which ensures maximum hermeticity. Consequently, it is difficult to get an indication about the actual oil level in the compressor during operation. A sample compressor equipped with an external oil sight tube can be ordered from Emerson for lab testing – see **Figure 4**.

For all new systems with YBVH* compressors, it is mandatory to check and test the oil distribution and compressor oil filling using a dedicated sample compressor equipped with an external oil sight tube.

The factory oil filling for all YBVH* compressor models has been optimized to a value of 600 ml, which corresponds to a level between 116 mm and 75 mm on the external oil sight tube. The oil level should be within these limits for all applications.

All YBVH* compressors are equipped with a positive displacement twin oil pump. The oil sump is located on the lower end of the compressor housing – see right-hand side of the compressor housing in **Figure 3**. The oil level in the oil sump does not reflect the oil filling in the rest of the compressor housing.

Figure 3 shows the acceptable oil level between 116 mm and 75 mm.

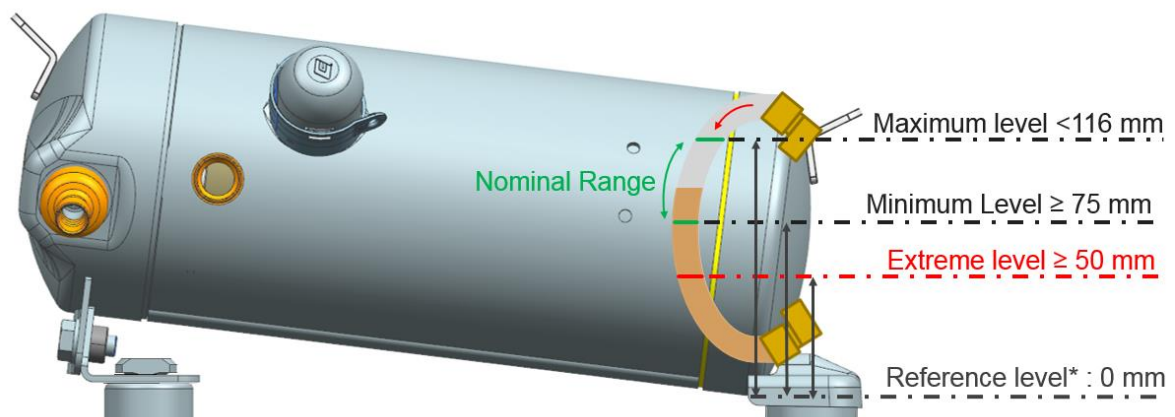


Figure 3: Acceptable oil level between 116 mm and 75 mm

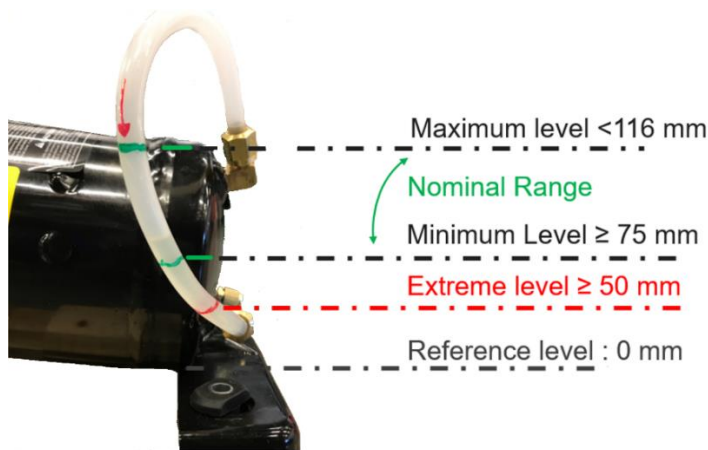


Figure 4: YBVH* sample compressor with external oil sight tube and markings

The oil tests on sample compressors with an external oil sight tube must be carried out by the system designer in the lab. This will allow to investigate the oil return behaviour to the compressor. In case some oil remains in the system, eg, in the tubes, heat exchangers or other components, oil top-up is required. A sufficient oil level must be present in the compressor at all times to ensure proper compressor reliability.

2.6.3 Test procedure

- Before first compressor start, mark the 116-mm maximum oil level, the 75-mm minimum level and the 50-mm extreme minimum level. The distance to the markings can be measured from the lower end of the compressor housing – see **Figure 3**.
- Start the compressor with a nominal speed of 3500 revolution per minute and run the system until it reaches stable conditions, then run at stable conditions for a minimum of 15 minutes. Any oil level between 116 mm and 75 mm is in the nominal range and is acceptable.
- Always check the level in the external oil sight tube. The oil level between 116 and 75 mm is the target. During the measurements and for short and transient periods, an oil level between 75 and 50 mm can be tolerated. Once the level falls below the 50-mm marking, stop the compressor immediately. Any oil level below the 50-ml marking is not acceptable.
- Top-up some oil if necessary and record the amount of topped-up oil. This could be the reference for all future systems with the same design. Perform the test anew to check the oil return behaviour again, as described above.
- If the oil level rises above the maximum level, compressor performance could start to drop due to the extra amount of oil. This situation will not harm the compressor, but it is recommended to remove the extra oil quantity in order to reach the nominal range.
- Repeat the test at different operating conditions, starting with the main operating point. Test different operating points in the corners of the operating envelope as well. Refer to **Figure 5** for main operating point, high load HL, maximum differential pressure MDP, high compression ratio HCR, low density flow LDF, high density flow HDF.

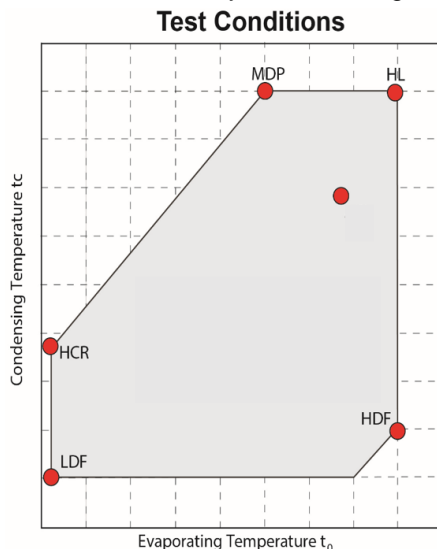


Figure 5: Testing points for oil return behaviour investigation

- Also perform tests for different system operations, eg, part load, defrost, bypass etc. Make sure the tests cover all possible different system conditions.
- The influence of the variable-speed operation must also be observed. Perform additional tests with low speed at the MDP/HCR corner and with low speed + high speed at the HL point.
- Record the bottom shell temperature under all tested conditions. The bottom shell temperature together with the evaporating temperature give an indication whether liquid refrigerant is returning or diluted in the compressor oil sump. The compressor sump temperature must remain above the evaporating temperature as shown in **Figure 6**. Otherwise adjustments need to be done in the design, refrigerant charge or superheat setting of the expansion device in order to always operate in the safe area.

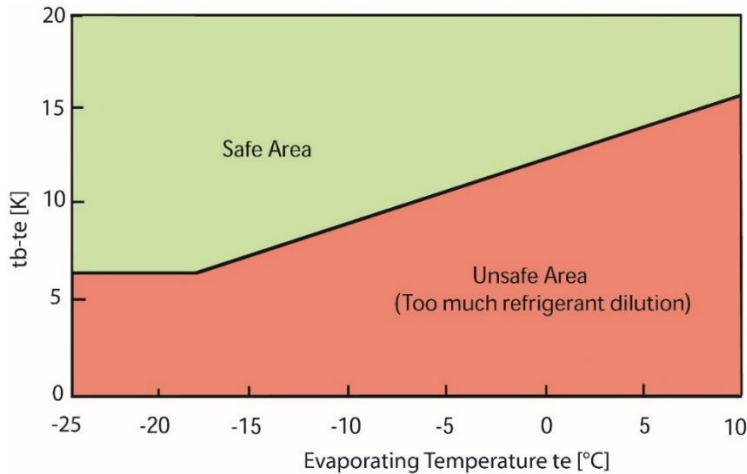


Figure 6: R290 oil dilution chart (tb = bottom shell temp.; te = evaporating temp.)

2.6.4 Application limits – Operating envelope



CAUTION

Inadequate lubrication! Compressor breakdown! Copeland scroll compressors are qualified for operation inside the envelope published by Emerson. The envelope is defined according to Emerson's testing and experience. Operating a compressor outside the envelope might lead to compressor failure which would be the system designer's responsibility. The superheat at the compressor suction inlet must always be sufficient to ensure that no refrigerant droplets enter the compressor. For a typical evaporator-expansion valve configuration a minimum stable superheat of at least 10 K is required. In the same way, the superheat at the compressor suction must always stay below a maximum limit specified by Emerson, depending on the model and for which the operating envelope is defined.

The YBVH* compressors operating envelope is shown in **Figure 7**.

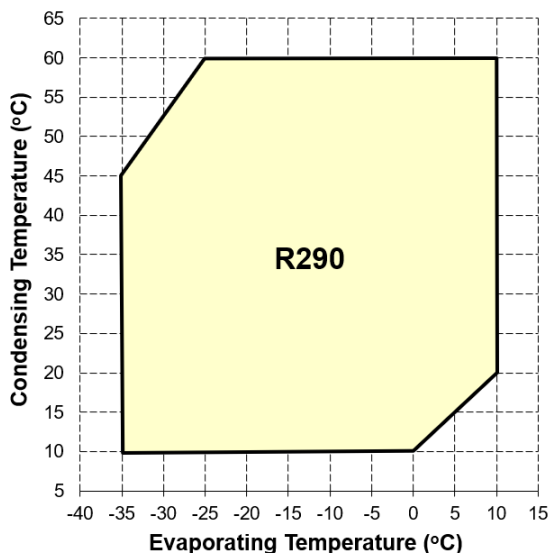


Figure 7: R290 application envelope for YBVH* compressors with 10 K suction superheat

The lower right boundary of the operating envelope is the minimum compression ratio required to keep the scrolls loaded. Operation below this limit could result in the compressor intermittently loading and unloading and noisy operation.

Please note the following comments about the envelope:

- Before compressor start with the matched pair of YBVH* and the ED3 drive, the pressure difference in the system has to be below 10 bar. If the pressure difference is reduced by opening the expansion valve, care must be taken to avoid liquid flood back to the compressor – also see oil dilution chart in **Figure 6**.
- An oil return test for the system must be performed. If required, the system design must be improved to ensure sufficient oil return from the system to the compressor – also see **section 2.6.2 "Oil filling and oil level"**.
- The use of 1500 rpm for low condensing and high evaporating temperatures is possible as shown in the envelope.
- The system should be able to bring the compressor to a point inside the envelope as fast as possible at the start, and to keep the compressor running there. Running outside the envelope is not allowed.
- At start-up the system should be able to bring the compressor to a point inside the envelope as fast as possible and to keep the compressor running there. Running outside the envelope is not allowed. Emerson's recommendation is to start with a speed of 3000 rpm and to freeze the speed for minimum 30 seconds or longer until the system is in stable operation – see **Figure 8 "Ramp up"**.

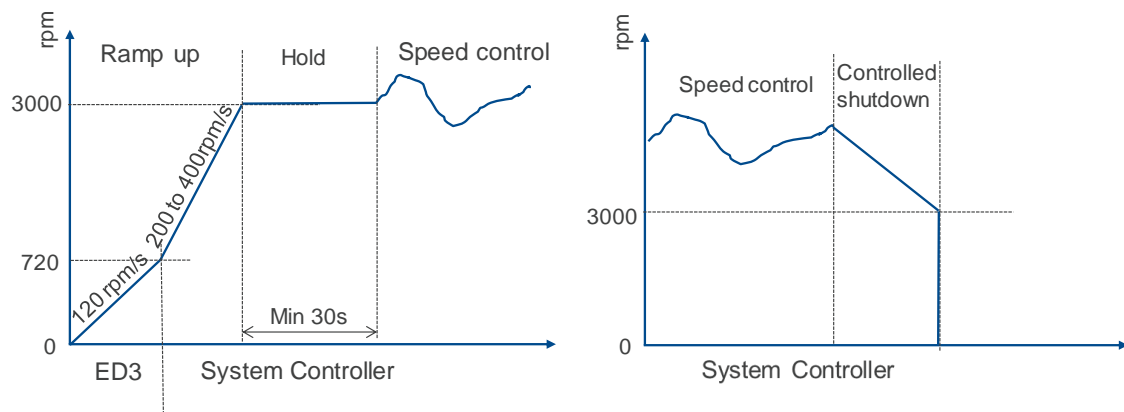


Figure 8: Ramp up and controlled shutdown

- Running/oscillating the compressor in and out of the envelope borders is not allowed and should be avoided.
- Running the compressor below the envelope at low condensing temperatures is possible for no longer than 30 minutes but users must be aware that unloading noise from the compressor can occur.
- Fast speed changes can cause instable control, eg, on the superheat control. Per Emerson experience speed changes should be in the range of 10 to 60 rpm/s depending on the system reaction.
- The system controller should adequately take care of controlling the envelope.
- To stop the compressor, reduce the speed to 3000 rpm then stop the compressor – see **Figure 8 "Controlled shutdown"**.

Before first start, each drive has to be set with the compressor model. This provides a speed-dependent maximum torque protection related to the compressor model. The maximum torque requirement will follow, with some margin, the maximum condensing temperature line for each speed. If the torque exceeds the maximum torque allowed for a specific speed, the drive will reduce the speed of the compressor in an attempt to keep the operating condition within the operating envelope. If reducing the speed of the compressor does not bring the condensing temperature back down within the envelope, the drive will go to the next level of protection and shut down the compressor.

This drive feature aims to protect the drive and the compressor. It cannot be used in the system as an operating envelope limitation.

The operating envelopes published in these guidelines are qualified for a minimum superheat of 10 K. The maximum superheat at high evaporating temperature should not exceed 20 K.

NOTE: Operate matched pairs of compressor and drive combinations only.

NOTE: Before first start, each drive has to be configured according to the compressor model.

NOTE: The ED3 drive overload protection aims at protecting the drive and the compressor. It cannot be used in the system as an operating envelope limitation. For more details on the overload protection refer to the ED3 User Manual.

2.6.5 PED category & maximums allowable pressure PS, temperature and relative humidity

The YBVH* compressor models in these guidelines are PED class I, according to the Pressure Equipment Directive PED 2014/68/EU.

The pressure PS is the maximum allowable pressure at the low- and high-pressure sides of the compressor. The maximum pressure value PS for the individual compressor type is printed on the nameplate of the compressor. Safety is established in compliance with the relevant standards applicable to the given product.

Compressor	PS High-pressure side	PS Low-pressure side	TS max Low-pressure side	PED Class
YBVH021	28 bar(g)	16.5 bar(g)	50 °C	1
YBVH029	28 bar(g)	16.5 bar(g)	50 °C	1
YBVH046	28 bar(g)	16.5 bar(g)	50 °C	1

Table 6: Maximum allowable pressures and PED category

2.6.6 Admissible temperature and relative humidity ranges

YBVH* compressors must comply with the ambient temperature and humidity ranges specified in Table 7 below, both for storage and in operation.

Compressor model	Compressor		
	Min / max relative humidity	Min / max ambient temperatures in storage or at standstill	Min / max ambient temperatures in operation
YBVH*	30 % / 95 % No condensing	-30 °C / 50 °C	-30 °C / 60 °C

Table 7: Allowable ambient temperature and humidity ranges for YBVH* compressors

2.6.7 Design features

The variable-speed horizontal scroll YBVH* has a number of design features that improve efficiency and reliability. An HVE-valve is part of YBVH* models for higher performance at high pressure ratio. This valve prevents reverse rotation during shutdown; however, some shutdown sound may occur.

All YBVH* compressors are equipped with a positive displacement twin oil pump to ensure an adequate supply of oil to the bearing system throughout the operating speed range of 1500 to 5500 rpm.

The motor in the variable-speed scroll is a three-phase, brushless permanent magnet (BPM) design coupled with a rotor embedded with high energy magnets. The input voltage is a series of +DC pulses, spaced in time to create an alternating current frequency.

2.7 Dimensions

The external dimensions of YBVH* compressors are shown in **Figures 9 & 10** below.

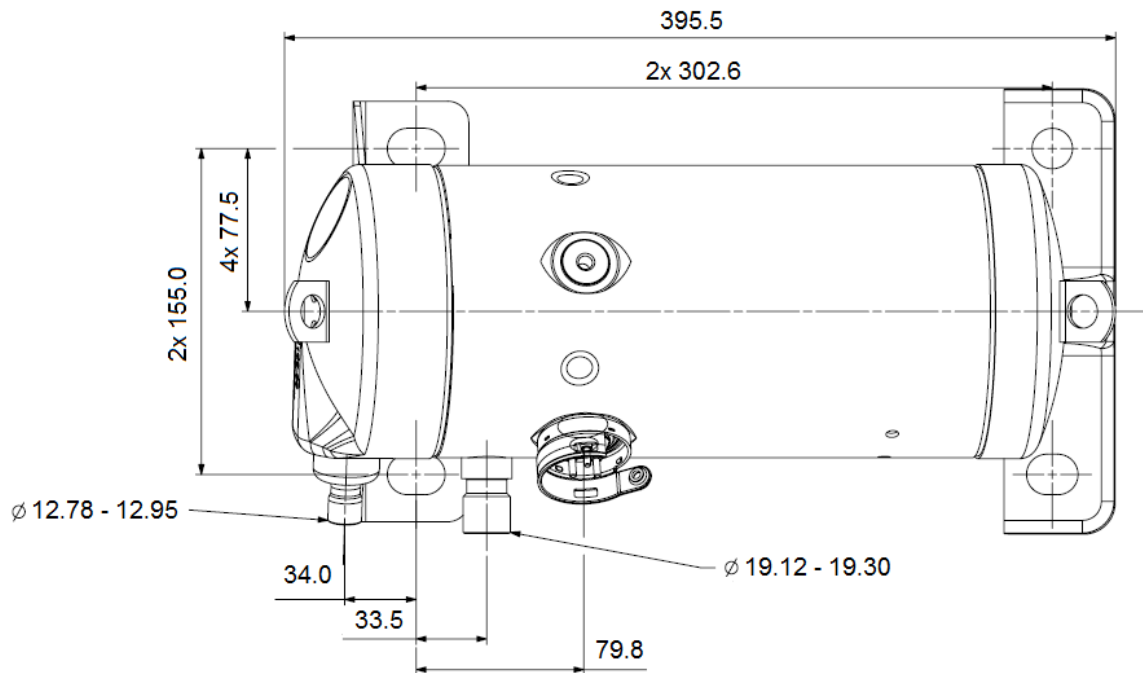


Figure 9: YBVH* compressors external dimensions – Top view

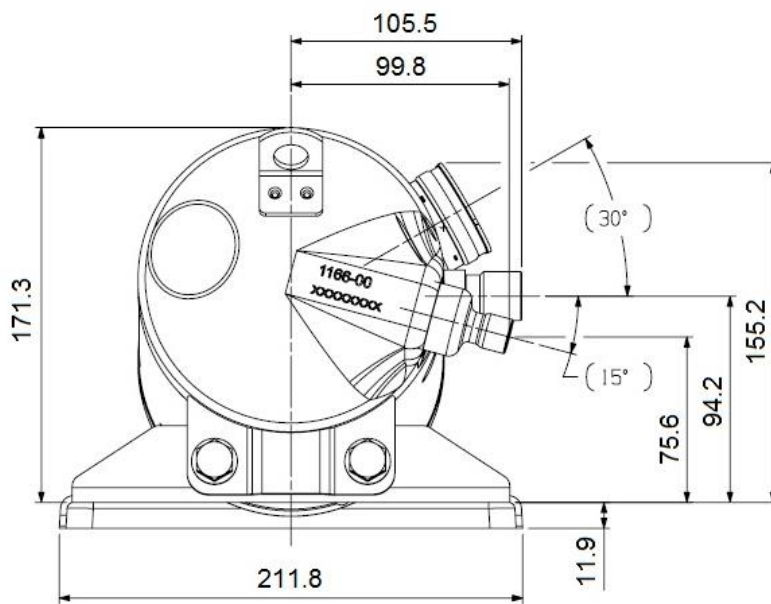


Figure 10: YBVH* compressors external dimensions – Side view

3 Installation



WARNING
High pressure! Injury to skin and eyes possible! Be careful when opening connections on a pressurized item.

3.1 Compressor and drive handling



WARNING
Static electricity! Personal injuries! Personnel handling the drives in a manufacturing plant environment should guard against static electricity by using the appropriate equipment, eg, antistatic wrist straps and mats.

3.1.1 Compressor transport and storage



WARNING
Risk of collapse! Personal injuries! Move compressors only with appropriate mechanical or handling equipment according to weight. Keep in the horizontal position. Respect stacking loads according to **Figure 11**. Check the tilting stability and if needed take action to ensure the stability of the stacked loads. Keep the packaging dry at all times.




Respect the maximum number of identical packages which may be stacked on one another, where "n" is the limiting number:

- **Transport: n = 1**
- **Storage: n = 2**

Figure 11: Maximum stacking loads for transport and storage

3.1.2 Compressor positioning and securing



IMPORTANT
Handling damage! Compressor malfunction! Only use the lifting eyes whenever the compressor requires positioning. Using discharge or suction connections for lifting may cause damage or leaks.

The compressor should be kept horizontal during handling.

The discharge connection plug should be removed first before pulling the suction connection plug to allow the dry air pressure inside the compressor to escape. Pulling the plugs in this sequence prevents oil mist from coating the suction tube making brazing difficult. The copper-coated steel suction tube should be cleaned before brazing.

The compressor plugs must be removed as late as possible before brazing so that the air humidity does not affect the oil characteristics.

As oil might spill out of the suction connection located low on the shell, the suction connection plug must be left in place until the compressor is set into the unit.

No object, eg, a swaging tool should be inserted deeper than 35 mm into the suction tube as it might damage the suction screen and other internal parts.

3.1.3 Installation location

Ensure that the compressor and drive are installed on a solid level base.

3.2 Compressor mounting parts

The compressors are designed to be mounted on vibration absorber grommets. The grommets dampen the start-up surge of the compressor and minimise sound and vibration transmission to the compressor base during operation. The metal sleeve inside is a guide designed to hold the grommet in place. It is not designed as a load-bearing member, and application of excessive torque to the bolts can crush the sleeve. Its inner diameter is approximately 8.5 mm to suit, eg, an M8 screw. The mounting torque should be 13 ± 1 Nm. It is critically important that the grommet is not compressed.

Mounting parts YBVH021 to YBVH046 – Soft mountings

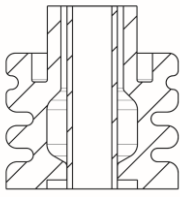


Figure 12: Rubber mounting part with sleeve

3.3 Compressor brazing procedure



WARNING

Air/flammable refrigerant mixture! Creation of a potentially flammable atmosphere! Fire hazard! Remove all refrigerant before opening the system. When working on a refrigerant-filled system, make sure to follow the safety and working instructions given in **Chapter 6 "Maintenance & repair"**.



WARNING

High temperature! Burning! Proceed with caution when brazing system components. Do not touch the compressor until it has cooled down. Ensure that other materials in the area of the compressor do not make contact.



CAUTION

Blockage! Compressor breakdown! Maintain a flow of oxygen-free nitrogen through the system at very low-pressure during brazing. Nitrogen displaces the air and prevents the formation of copper oxides in the system. If allowed to form, the copper oxide material can later be swept through the system and block screens such as those protecting capillary tubes, thermal expansion valves, and accumulator oil return orifices.

Contamination or moisture! Bearing failure! Do not remove the connection plugs until the compressor is set into the unit. This minimises any entry of contaminants and moisture.

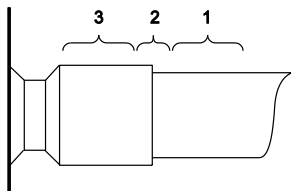


Figure 13: Tube brazing areas

Copeland scroll compressors have copper-plated steel suction and discharge stub tubes. These stub tubes are far more robust and less prone to leaks than copper tubes. Due to the different thermal properties of steel and copper, brazing procedures should be carried out in an appropriate manner.

Refer to **Figure 13** and procedure below for the brazing of the suction, discharge and injection lines to a scroll compressor.

- For systems with A3 flammable refrigerant, it is mandatory to flush oxygen-free nitrogen through the piping during the brazing process.
- The copper-coated steel tubes on scroll compressors can be brazed in approximately the same manner as any copper tube.
- Recommended brazing materials: any silfos material is recommended, preferably with a minimum of 5 % silver. However, 0 % silver is acceptable.
- Be sure tube fitting inner diameter and tube outer diameter are clean prior to assembly.
- Using a double-tipped torch, apply heat in area 1.
- As the tube approaches brazing temperature, move the torch flame to area 2.
- Heat area 2 until braze temperature is attained, moving the torch up and down and rotating around the tube as necessary to heat the tube evenly. Add braze material to the joint while moving the torch around the joint to flow braze material around the circumference.
- After the braze material flows around the joint, move the torch to heat area 3. This will draw the braze material down into the joint. The time spent heating area 3 should be minimal.
- As with any brazed joint, overheating may be detrimental to the final result.

NOTE: Since the discharge stub contains a check valve, care must be taken not to overheat it to prevent brazing material from flowing into it.

3.4 Pressure safety controls

3.4.1 High-pressure protection

A high-pressure cut-out control must be used in all applications to avoid abnormally high operating pressures. The maximum cut-out setting should be defined referring the high-side PS (maximum allowable pressure) according to the requirements of applicable standards and directives.

The high-pressure cut-out limiter has to be connected to the ED3 drive – see wiring diagrams in **section 4.2 "Electrical installation"**. The output is a 5 VDC signal. Normally the high-pressure cut-out limiter must be closed. If the limiter is open, the drive will not operate.

NOTE: For the connection of the high-pressure limiter to the drive, please refer to the ED3 User Manual.

3.4.2 Low pressure protection



WARNING

Operation below ambient pressure! Fire hazard! During operation below ambient pressure, a flammable mixture can form inside the system. Make sure that air does not enter the system.



CAUTION

Operation outside the application envelope! Compressor breakdown! A low-pressure protection shall be fitted in the suction line to stop the compressor when it operates outside the envelope limits.

Make sure that the pressure never falls below atmospheric pressure. If it does, immediately de-energize the power supply of the compressor and check the cause of the low pressure before restarting the compressor.

For hermetically sealed systems, in case the approved application envelope is below atmospheric pressure, the following rules shall be observed:

- valid only for hermetically sealed systems – see safety standards for definition;
- the minimum absolute pressure is 0.5 bar;
- a discharge temperature control is mandatory to stop the compressor when exceeding the maximum discharge temperature – see **section 3.6 "Error! Reference source not found. temperature protection"**.

Emerson requires that all YBVH* compressors without exception be fitted with a low-pressure protection in the suction line, meaning that no service valve between compressor and pressure limiter is allowed. The mandatory inclusion of a low-pressure control will stop the compressor operating outside the published envelope limits.


Customer shall follow all applicable regulations and standards to apply appropriate control to ensure that the pressure is always above the required minimum limit.

3.5 Crankcase heating function



CAUTION

Motor overheating! Compressor damage! The crankcase heating function must not be energized when the system is in a vacuum or if there is no refrigerant charge in the system. The system low-pressure cut-out control can be used as an indicator of the presence of refrigerant charge.



IMPORTANT

Oil dilution! Bearing malfunction! Follow the off-cycle migration statement described below for long term reliability and to minimize nuisance associated with flooded start conditions.

Contrary to the standard fixed-speed Copeland scroll compressors, the YBVH* models do not require any optional external crankcase heater to be mounted on the compressor.

Instead, the ED3 drive has a programmable feature that will utilize the motor windings to provide up to 50 Watts DC of heating to serve as a crankcase heater.

The crankcase heating function activation is recommended when the system charge exceeds the refrigerant charge limit indicated in **Table 8** below.

If this function is required, the crankcase heating function must be applied and the power has to be determined by tests across the envelope for winter and summer situations.

Compressor	Refrigerant charge limit
YBVH021 YBVH029	1.2 kg
YBVH046	1.2 kg

Table 8: Refrigerant charge limit

NOTE: At first start, the crankcase heating function must be energized a minimum of 12 hours prior to starting the compressor.

3.6 Discharge gas temperature protection



CAUTION

Inadequate lubrication! Scroll set damage! All YBVH* compressors must be equipped with an external discharge gas temperature protection.

A good system control shall prevent the system from operating outside the published operating envelope and acceptable superheat range, whatever the climatic conditions and the capacity demand. However, under some extreme operating conditions such as loss of charge or improper control operation, the internal discharge gas temperature reached can cause compressor damage. In order to guarantee positive compressor protection, discharge gas temperature protection is required for any application with Copeland compressors.

The maximum discharge gas temperature is 135 °C for all YBVH* models.

Discharge gas temperature protection is the "fall-back" for failure of the system control. It is essential that proper control of both the evaporating and condensing pressures and the superheat is maintained and has the ability to cope with all likely conditions and high loads. Reliance on protectors will cause inadequate system performance and short cycling.

NOTE: The maximum discharge gas temperature indicated in this chapter are valid for safe operation within the approved application envelope. The discharge line thermostat has the function of a compressor protection device; it is not designed to control the operating envelope. For compressor envelope control, an additional control device or regulation must be used.

3.6.1 Excessive discharge gas temperatures

A few of the possible consequences of excessive discharge gas temperatures are listed below:

- Since the oil circulates in the system with the refrigerant, it is subjected to high discharge gas temperatures. If the discharge gas temperature becomes too high, the so-called "cooking" effect will occur (heating of oil under exclusion of air). Carbon deposits can form at points of high temperature, for example on the valves, oil channels, oil filters, etc. The oil lubricity will be reduced and a progressive wear process will occur which will prematurely damage the compressor.
- The stability of the refrigerant can also be affected, particularly if traces of contaminant are present.

The problems described above frequently occur simultaneously, particularly since the chemical reaction speed approximately doubles with every 10 °C temperature rise. This directly leads to chemical reactions of the oil with the refrigerant and the compounds extracted from sealants and insulation material. As a consequence, contaminants of various types, among them acids, will form inside the system.

3.6.2 Compressor discharge gas temperature protection

YBVH* compressors have no internal discharge temperature protection. Emerson offers discharge temperature sensors (NTC thermistor) for installation on the discharge piping of the compressor, to be connected electrically to the ED3 inverter – see the ED3 User Manual for correct connection and further details. Refer to the operating map for maximum operating discharge line temperatures.

Please follow the recommendations below for sensor assembly:

- The NTC temperature sensor must be attached to the compressor discharge line at a distance of max. 120 mm from the compressor discharge fitting.

- For best response and to reduce the impact of ambient temperature, the sensor must be insulated and placed in a sleeve brazed on the discharge pipe – see **Figure 14**.
- Use thermal compound to improve heat transfer from sleeve to sensor. The thermal compound must be approved for maximum system operating temperatures.
- Protect the sensor from being moved or removed from its position by transport, vibration or any other incident.

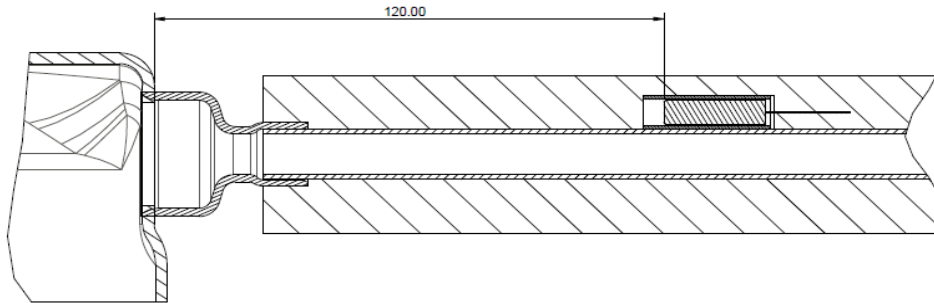


Figure 14: Discharge temperature sensor mounting

3.7 Filter screens



CAUTION
Screen blocking! Compressor breakdown! Use screens with at least 0.6 mm openings.

The use of screens finer than 30 x 30 meshes (0.6 mm openings) anywhere in the system should be avoided with these compressors. Field experience has shown that finer mesh screens used to protect thermal expansion valves, capillary tubes or accumulators can become temporarily or permanently plugged with normal system debris and block the flow of either oil or refrigerant to the compressor. Such blockage can result in compressor failure.

3.8 Mufflers

External mufflers, normally applied to piston compressors in the past, may not be required for Copeland scroll compressors.

Individual system tests should be performed to verify acceptability of sound performance. If adequate attenuation is not achieved, use a muffler with a larger cross-sectional area to inlet area ratio. A ratio of 20:1 to 30:1 is recommended.

A hollow shell muffler will work quite well. Locate the muffler at minimum 15 to maximum 45 cm from the compressor for the most effective operation. The further the muffler is placed from the compressor within these ranges, the more effective. Choose a muffler with a length of 10 to 15 cm.

3.9 Sound shell

No sound shell attenuation for YBVH* compressors is available from Emerson at this time. If a sound shell is still needed, particular attention shall be paid to the electrostatic charge of the insulation material, which could be a potential ignition source – see EN 60079-0, clause 7.4.

3.10 Insulation material

Insulation material is typically used in a system to insulate the suction line, suction accumulator, expansion valve bulb or discharge line thermostat. When choosing the insulation material, particular attention shall be paid to its electrostatic charge, which could be a potential ignition source – see EN 60079-0, clause 7.4.

3.11 Reversing valve

A variable-speed scroll brings a significant benefit during the defrost cycle. By taking advantage of the higher speeds and flow rates, the defrost time will typically be shorter than in a fixed-speed compressor system, which will reduce the time electric resistance heat is used during the defrost cycle.

Reversing valve sizing must be within the guidelines of the valve manufacturer. Required pressure drop to ensure valve shifting must be measured throughout the operating range of the unit and compared to the valve manufacturer's data. Conditions that generate low flow rates and low pressure drop across the valve can result in a valve not shifting.

This can result in a condition where the compressor appears to be not pumping, ie, balanced pressure. It can also produce elevated compressor sound levels. During a defrost cycle, when the reversing valve abruptly changes the refrigerant flow direction, the suction and discharge pressures will go outside of the operating envelope. The condition will usually cross the diagonal line representing the lower right-hand side corner of the envelope. The sound that the compressor makes during this transition period is normal, and the duration of the sound will depend on the coil volume, outdoor ambient and system charge.

Since Copeland scroll compressors have a very high volumetric efficiency, their displacements are lower than those of comparable capacity reciprocating compressors. As a result, Emerson recommends that the capacity rating on reversing valves be no more than 1.5 to 2 times the nominal capacity of the compressor in order to ensure proper operation of the reversing valve under all operating conditions.

The reversing solenoid valve should be wired so that the valve does not reverse when the system is shut off by the operating thermostat in the heating or cooling mode. If the valve is allowed to reverse at system shut-off, suction and discharge pressures are reversed to the compressor. This results in pressures equalizing through the compressor which can cause the compressor to slowly rotate until the pressures equalize. This condition does not affect compressor durability but can cause unexpected sound after the compressor is turned off.

The preferred method of mitigating defrost sound for the variable-speed scroll is to signal the drive to go to low speed when a defrost signal is received from the system. When low speed is reached, the reversing valve is signalled to change positions. The system should be allowed to operate for 30 to 60 seconds at low speed for the suction and discharge pressures to stabilize. After 30 to 60 seconds the compressor speed should be increased to a predetermined speed based on the outdoor ambient temperature. The routine at the end of the defrost cycle should be similar. The above method is a suggestion and the system design engineer should develop the routine that best mitigates compressor sound during defrost while ensuring a defrost cycle that is as short as possible.

3.12 Sound and vibrations



WARNING

Vibrations! Creation of a flammable atmosphere! Carefully check the system for vibrations.

Vibrations during compressor operation can cause cracks which could lead to refrigerant leakage. This situation must be avoided by the system manufacturer/installer. To this end, the pipework must be carefully designed when connecting a scroll compressor to a system.

A scroll compressor makes both a rocking and twisting motion and enough flexibility must be provided in the pipelines to allow starting, stopping and steady state running of the compressor without transmitting excessive stress into any line attached to the unit. In a split system, the most important goal is to ensure minimal vibration in all directions to avoid transmitting vibrations to the structure to which the lines are fastened.

Under some conditions, the Copeland scroll has a normal starting rotational motion that can transmit a transient noise along the lines. This may be particularly pronounced in compressors using a three-phase motor due to their inherently higher starting torque. This phenomenon, like the one described previously, can easily be avoided by using standard line isolation techniques.

Since the variable-speed scroll has a broad running frequency range (25-92 Hz), it is almost impossible to avoid all of the natural frequencies that may exist in the system piping. The system designer must carefully evaluate these resonant frequency conditions and either a) avoid them by not allowing the compressor speed to align with the resonant frequency, or b) evaluate the risk and life of the piping system when the compressor is allowed to run at frequencies that are coincident with the natural frequencies of the piping system. If option "b" is chosen, strain gauging of the system piping is required.

The sound level of a system is the result of design, quality and application. Scroll compressors sound power levels generally increase with the compressor model capacity and the condition pressure ratio. For variable-speed scroll compressors, they also and mainly increase with the compressor speed.

3.13 Suction accumulators



CAUTION

Inadequate lubrication! Bearing and moving parts destruction! Avoid liquid refrigerant returning to the compressor. Liquid refrigerant dilutes the oil, could wash the oil off the bearings, moving parts and could lead to overheating and compressor failure.

Application of A3 refrigerants has an impact on the PED classification (Pressure Equipment Directive PED 2014/68/EU). Select and determine the correct PED classification of refrigeration components, such as suction accumulators.

Irrespective of system charge, oil dilution may occur if large amounts of liquid refrigerant repeatedly flood back to the compressor during:

- normal off cycles
- defrost
- varying loads

Due to Copeland scroll's inherent ability to handle liquid refrigerant in flooded start and defrost cycle operation, an accumulator is not required for durability in most systems. However, large volumes of liquid refrigerant repeatedly flooding back to the compressor during normal off cycles, or excessive liquid refrigerant flooding back during defrost or varying loads can dilute the oil, no matter what the system charge is. As a result, bearings and moving parts will be inadequately lubricated and wear may occur.

To determine if the accumulator can be removed, dedicated tests must be carried out to ensure that excessive liquid does not flood back to the compressor during defrost or varying loads. The defrost test must be done at an outdoor ambient temperature of around 0 °C in a high relative humidity environment. Liquid floodback must be monitored during reversing valve operation, especially when coming out of defrost. Excessive floodback occurs when the sump temperature drops below the safe operation line shown in the oil dilution chart – see **Figure 6 in section 2.6.3 "Test procedure"**.

If an accumulator is used, the oil-return orifice should be from 1 to 1.4 mm in diameter depending on compressor size and compressor floodback results. A large-area protective screen no finer than 30 x 30 mesh (0.6 mm openings) is required to protect this small orifice from plugging with system debris. Tests have shown that a small screen with a fine mesh can easily become plugged causing oil starvation to the compressor bearings.

The behaviour of the accumulator and its ability to prevent liquid slugging and subsequent oil pump-out at the beginning and end of the defrost cycle should be assessed during system development. This will require special accumulators and compressors with sight tubes for monitoring refrigerant and oil levels.

4 Electrical connection

4.1 General recommendations

Before connecting the drive to the power network, make sure that all the cables to and from the drive and to the compressor are correctly connected and that the supply voltage, phases and frequency match the drive nameplate data.

Wiring should remain physically separated to minimize the introduction of electrical noise.

Before connecting the compressor, ensure the supply voltage, the phases and the frequency match the nameplate data.

For safety reasons, Emerson recommends that the electrical installation be executed in compliance with standard EN 60204-1 and/or other standards and regulations of application when dealing with A3 flammable refrigerants.

When installing YBVH* compressors in a system, the following measures must be taken:

- The ground wiring must conform to local regulations and codes of practice (only the provided parts must be used).
- The grounding screw must be torqued to 2.4 to 2.6 Nm.
- A cable strain-relief device must be added.
- Cable and wires must be protected against sharp edges.

4.2 Electrical installation



WARNING

Conductor cables! Electrical shock! Shut off power supply before undertaking any task on electrical equipment.



WARNING

Ignition source in a potentially flammable atmosphere! Fire hazard! The electrical connection of the scroll compressors is not an ignition source during normal operation but could become one when not installed properly according to installation instructions. Ensure correct mechanical and electrical installation.

System capacitors may remain charged for several minutes after shutdown. Before starting to work on the electrical installation make sure sparking is not possible. Continuously check if the ambient atmosphere is non-flammable when working on the electrical installation.

For recommended wiring diagrams, see **Figures 16 & 17**.

NOTE: A K2 contactor, used usually for the safety chain, is optional.

NOTE: An RCD Type B is needed. It can also protect against a DC current leakage.

NOTE: For recommendations about the EMC and details about wiring up the drive assembly, please refer to the ED3 User Manual.



Figure 15: Residual current device

For the single-phase and three-phase matched pairs of YBVH* compressor and ED3 drive, the following circuit diagrams can be used:

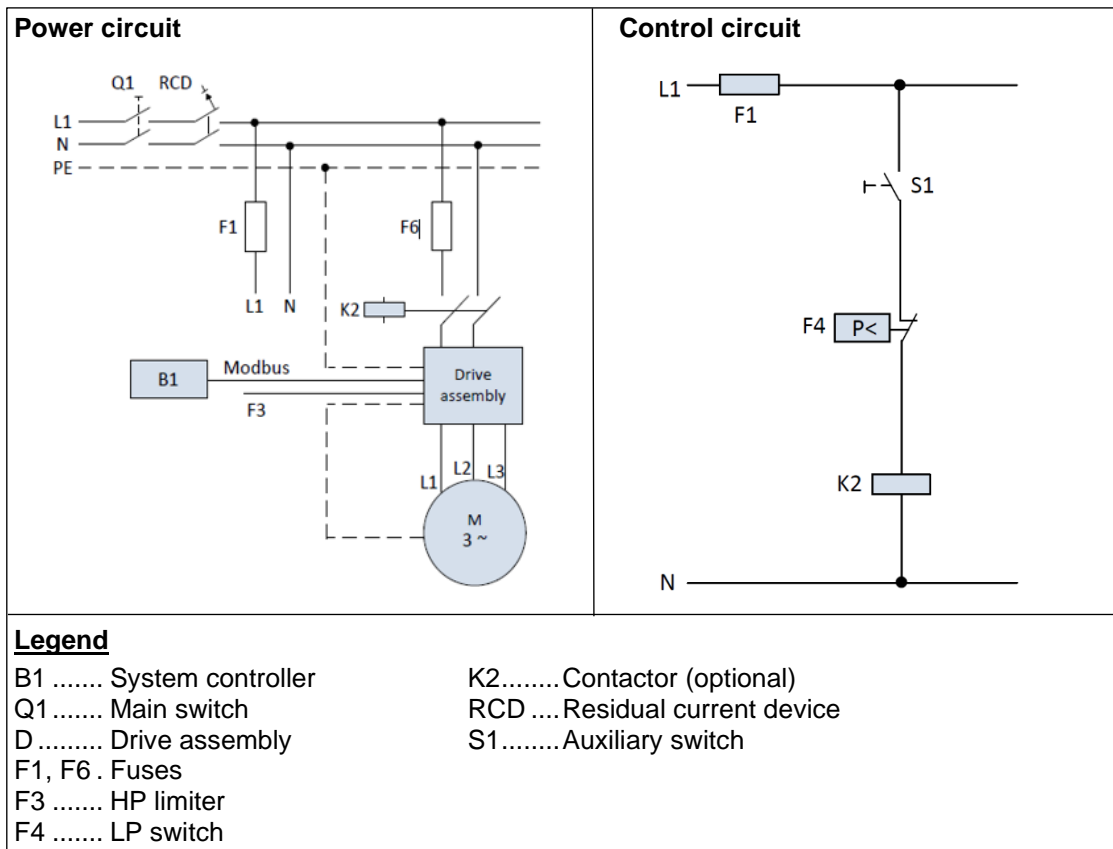


Figure 16: Wiring diagram for YBVH* compressors with single-phase drive

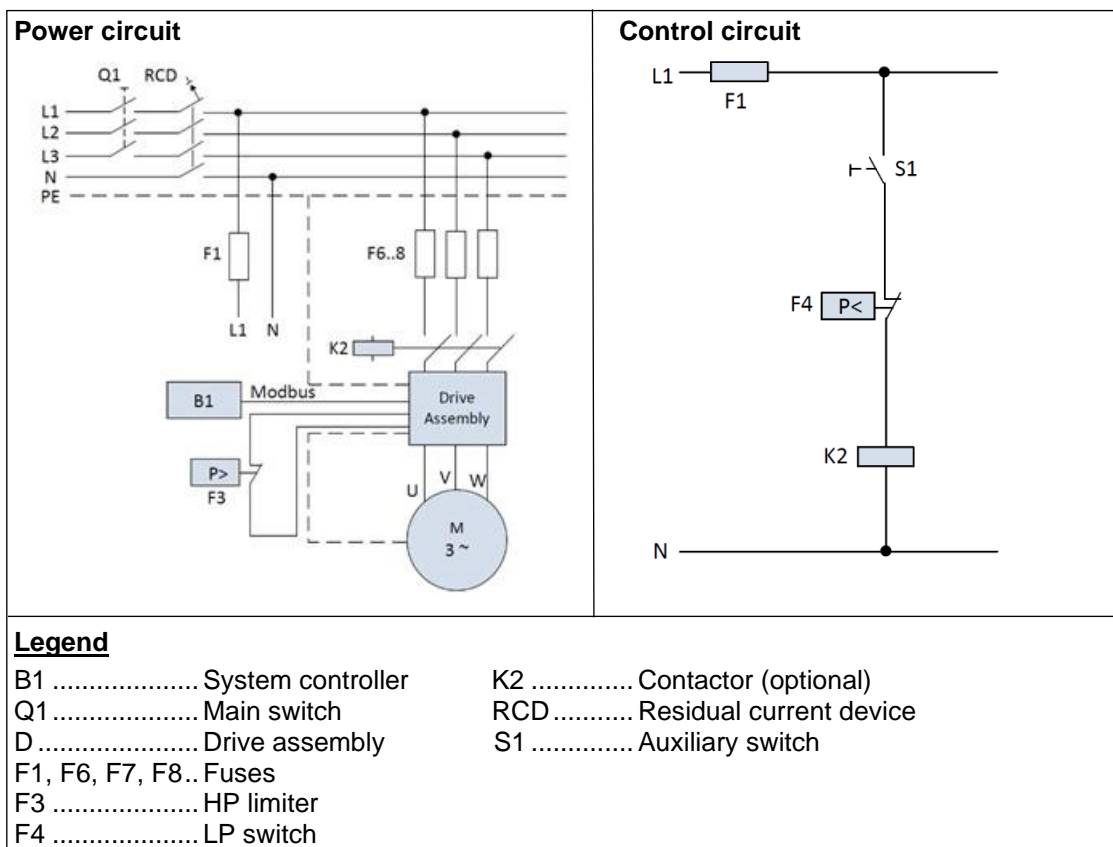


Figure 17: Wiring diagram for YBVH* compressors with three-phase drive

4.3 Terminal connections



WARNING

Ignition source in a potentially flammable atmosphere! Fire hazard! Any work on the energized terminals in the compressor terminals could create an ignition. Do not touch the energized terminals with a tool or cable when the compressor is energized.



CAUTION

Mechanical stress or shock! Overheating! Terminal Fusite damage and leakage! Mechanical stress and shocks to the Fusite must be avoided as they could damage the glass and/or ceramic. This might result in hermeticity failure or loss of terminal performance. Precautions are required to prevent striking or bending of pins. Bent or damaged pins may result in loss of hermeticity and/or terminal performance.

Ensure correct connection of cables to the compressor terminal Fusite to avoid local overheating of Fusite pins which might lead to refrigerant leaks.

4.3.1 Molded plug connection



WARNING

Electric arc! Explosion hazard! Removing the molded plug cable while under load or electrically energized will create arcing between the connection pins and the cable connectors. Always shut off power supply before attaching or removing the molded plug cable from the connection pins.

The molded plug connector must be smoothly pushed by hand towards the connection pins of the compressor. Never use a tool to knock the molded plug connector on the terminal pins as this could damage the glass inserts of the pins.

It is mandatory to secure the molded plug cable on the connection pins with a retainer.

Any rework on the terminal pins is strictly prohibited.



WARNING

Electrical shock hazard! Serious personal injuries and/or system breakdown! Use R290 qualified and dedicated molded plug cables with grounding connection only. Make sure to connect the grounding first before attaching the molded plug cable to the connection pins of the compressor. When removing the molded plug cable from the connection pins, disconnect the grounding last.

YBVH* horizontal compressors are equipped with electrical connection pins ready for molded plug connection. Their protection class is IP65. Specific molded plug power cables have been qualified for use with R290. The R290 dedicated kit includes a special O-ring, a grounding connection and a retainer – see **Figures 18 to 20**.



Figure 18: Circle fence with motor terminals



Figure 19: Power cable molded plug (IP65)

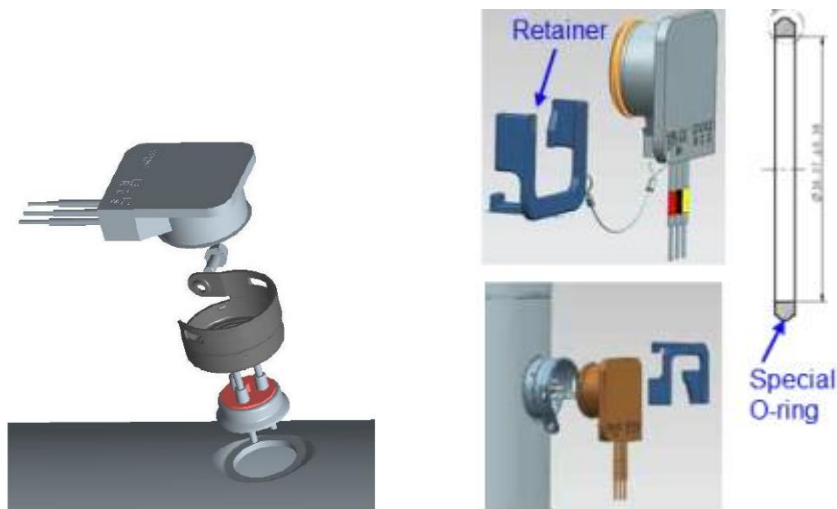


Figure 20: Connecting the molded plug power cable to the connection pins

4.3.2 Assembly of the molded plug cable

- Make sure to use only R290-qualified and dedicated molded plug power cables with grounding connection and retainer.
- Check that the O-ring on the molded plug connector is in place and not damaged.
- Shut off power supply.
- Check that the circle fence is clean and dry before connecting the molded plug power cable.
- Connect the grounding of the molded plug power cable to the compressor circle fence.
- Attach the molded plug connector to the compressor connection pins. Smoothly push the molded plug connector by hand as far as possible towards the pins. Never use a tool to knock the molded plug as this could damage the glass inserts of the pins
- Secure the connection with the retainer.

4.3.3 Removing the molded plug power cable

- Shut off power supply.
- Remove the retainer from the connection.
- Remove the molded plug connector from the connection pins.
- Disconnect the grounding from the compressor circle fence.

NOTE: To select the appropriate molded plug power cables, please refer to the Emerson spare parts software available at www.climate.emerson.com/en-gb.

4.4 Motor windings

YBVH* compressors feature a three-phase brushless permanent magnet motor. It is exactly the same whether the drive supply is single-phase or three-phase. The motor is connected in star.

4.5 Motor insulation

The motor insulation material is class "F" for maximum allowable operating temperatures according to IEC 34-1 or DIN 57530.

4.6 Protection devices

Fuses must be installed before the drive. The selection of fuses has to be carried out in accordance with VDE 0635, DIN 57635, EC 269-1 or EN 60-269-1.

4.7 High-potential testing



WARNING

High potential testing in a flammable atmosphere! Fire hazard! Make sure the atmosphere is non-flammable before performing high potential testing. Do not perform any high potential test when the compressor is charged with flammable refrigerant.



WARNING

Conductor cables! Electrical shock! Shut off power supply before high-potential testing.



CAUTION

Internal arcing! Motor destruction! Do not carry out high-voltage or insulation tests if the compressor housing is under vacuum.

Emerson subjects all scroll compressors to a high-voltage test after final assembly. Each motor phase winding is tested according to EN 60034-1 at a differential voltage of 1000 V plus twice the nominal voltage.

Since high-voltage tests lead to premature ageing of the winding insulation, further additional tests of that nature are not recommended. However, if it has to be done for any reason, it shall not be made with the compressor charged with refrigerant. Carry out the test with a lower voltage, as described above. Disconnect all electronic devices, eg, motor protection module, fan speed control, etc prior to testing.

Special attention should be paid when performing a high-potential test and reading the Megohm resistance on an R290 compressor as these tests can induce an electrical arc and cause a potential fire/explosion hazard.

For the same reason, compressors removed from an R290 system will need to have the oil drained and a nitrogen purge introduced to flush any remaining refrigerant from the compressor prior to high-potential testing and Megohm resistance reading.

5 Start-up & operation



WARNING

Diesel effect! Compressor destruction! The mixture of air and oil at high temperature can lead to an explosion. Avoid operating with air.



WARNING

Air/flammable refrigerant mixture! Creation of a flammable atmosphere! Make sure the atmosphere is non-flammable before starting the system. Ensure that the system contains only refrigerant.



IMPORTANT

Oil dilution! Bearing malfunction! It is important to ensure that new compressors are not subjected to liquid abuse. It is recommended to energize the crankcase heating function if the refrigerant charge exceeds 1.2 kg for YBVH* compressors.

5.1 Strength-pressure test



WARNING

High pressure! Personal injuries! Consider personal safety requirements and refer to test pressures prior to test.



IMPORTANT

System contamination! Bearing malfunction! Use only dry nitrogen) for pressure testing. DO NOT USE other industrial gases.

The compressor has been strength-tested in the Emerson factory. As the compressor complies with EN 60335-2-34, it is not necessary for the manufacturer/installer to strength-test the compressor.

Since it is not possible to isolate the compressor from the rest of the system, system strength pressure testing according to EN 378-2 should be carried out in two steps at two different test pressures, the high-side test pressure HPT and the low-side test pressure LPT:

- First, apply for a short time the HPT in the high-pressure section of the system up to the compressor discharge stub. The compressor check valve automatically closes to isolate the low-pressure side. During that test, make sure that the low-pressure side of the system does not exceed the compressor maximum standstill pressure, ie, the compressor low side PS.
- Then, test the low-pressure section of the system by applying the LPT not exceeding the low side PS.

5.2 Compressor tightness test



WARNING

High pressure! Personal injuries! Consider personal safety requirements and refer to test pressures prior to test.



IMPORTANT

System contamination! Bearing malfunction! Use only dry inert gases (for example nitrogen) for leak testing. DO NOT USE other industrial gases.

The compressor has been leak-pressure tested in the Emerson factory.

Never add refrigerant to the test gas (as leak indicator).

Any later modification to compressor connections can have an impact on the compressor tightness. Always leak-pressure test the compressor after opening or modifying the connections.

5.3 System evacuation

Before the installation is put into commission, it has to be evacuated with a vacuum pump. The vacuum pump and all tools have to be approved for A3 refrigerant/air mixture. The installation should be evacuated down to 0.3 mbar. Proper evacuation reduces residual moisture to 50 ppm. During the initial procedure, suction and discharge shut-off valves on the compressor remain closed. The installation of adequately sized access valves at the furthest point from the compressor in the suction and liquid lines is advisable. The pressure must be measured using a vacuum pressure gauge on

the access valves and not on the vacuum pump; this serves to avoid incorrect measurements resulting from the pressure gradient along the connecting lines to the pump.

Evacuating the system only on the suction side of a scroll compressor can occasionally result in a temporary no-start condition for the compressor. The reason for this is that the floating seal could axially seal with the scroll set, with the higher pressure on the floating seal. Consequently, until the pressures equalise, the floating seal and scroll set can be held tightly together.

The highest demands are placed on the leak-proof design of the installation and on the leak testing methods – please refer to EN 378.

5.4 Preliminary checks – Pre-starting



WARNING

Air/R290 refrigerant mixture in a potentially flammable or explosive atmosphere! Fire and explosion hazard! Whenever starting up a system charged with R290 refrigerant, eg, after filling, repair, or maintenance, make sure not to start and operate accidentally in a flammable or explosive atmosphere.

Discuss details of the installation with the installer. If possible, obtain drawings, wiring diagrams, etc. It is ideal to use a check list but always check the following:

- no explosive atmosphere or flammable gas in the ambient;
- suitable ventilation according to the room volume and to the refrigerant charge;
- visual check of the electrics, wiring, fuses etc;
- cable glands in good state, all electrical connections well connected and terminal box closed to ensure corresponding IP protection;
- visual check of the plant for leaks, loose component parts such as TXV bulbs or solenoid valve coil, loose wires in electrical installation, etc;
- functional test of HP & LP switches and any pressure actuated valves;
- check setting and operation of all safety features and protection devices;
- all valves in the correct running position;
- pressure and compound gauges fitted;
- correctly charged with refrigerant;
- compressor electrical auxiliary switch location and position.

5.5 Charging procedure



WARNING

Air/R290 refrigerant mixture in a potentially flammable or explosive atmosphere! Fire and explosion hazard! Only use filling equipment designed and approved for use and operation with R290. Make sure all connections are tight to avoid leakage. Make sure to fill with pure R290.



CAUTION

Low suction pressure operation! Compressor damage! Do not operate with a restricted suction. Do not operate with the low-pressure cut-out bridged. Do not operate the compressor at pressures not allowed by the operating envelope. Allowing the suction pressure to drop below the envelope limit for more than a few seconds may overheat scrolls and cause early drive bearing and moving parts damage.

Prior to charging or re-charging, the refrigerant system must be leak- and pressure-tested with appropriate purging gas.

Ensure that the system is grounded prior to charging with refrigerant.

The system shall be liquid-charged through the liquid-receiver shut-off valve or through a valve in the liquid line. The use of a filter drier in the charging line is highly recommended. Systems shall be liquid-charged on both the high and low sides simultaneously to ensure a positive refrigerant pressure is present in the compressor before it runs. The majority of the charge shall be placed in the high side of the system to prevent bearing washout during first-time start on the assembly line.

Extreme care shall be taken not to overfill the system with refrigerant.

The system manufacturer/installer must respect the charge limitations according to valid standards, such as EN 378.

5.6 Run-in time

Scroll compressors exhibit a slight decrease in input power during the initial running period. Published performance ratings are based on calorimeter testing which is carried out after run-in. Therefore, users should be aware that before the performance specified by EN 12900 is achieved the compressor needs to be run in. Recommended run-in times for YBVH* compressors to attain the published performance are 16 hours at the saturation evaporating and condensing temperature conditions -10/45 °C with a superheat of 10 K.

5.7 Initial start-up



CAUTION

High discharge pressure operation! Compressor damage! Do not use compressor to test opening setpoint of high-pressure limiter. Bearings and moving parts are susceptible to damage before they have had several hours of normal running in.

Liquid and high-pressure loads could be detrimental to new bearings. It is therefore important to ensure that new compressors are not subjected to liquid abuse and high-pressure run tests. It is not good practice to use the compressor to test the high-pressure switch function on the production line. Switch function can be tested with nitrogen prior to installation and wiring can be checked by disconnecting the high-pressure switch during the run test.

5.8 Start-and-stop routine

The drive controls the start-and-stop routine of the variable-speed scroll. This routine allows for soft starting and controlled stopping, an advantage over traditional on/off control of fixed capacity units. For more information about this topic please refer to the ED3 User Manual.

5.9 Starting sound

During the very brief start-up, a clicking sound is audible, resulting from initial contacting of the spirals; this sound is normal. Due to the design of the Copeland scroll compressors, the internal compression components always start unloaded even if system pressures are not balanced. In addition, since internal compressor pressures are always balanced at start-up, low-voltage starting characteristics are excellent for Copeland scroll compressors.

5.10 Deep vacuum operation



CAUTION

Vacuum operation! Compressor damage! Copeland scroll compressors should never be used to evacuate refrigeration or air-conditioning systems. Operating scroll compressors in deep vacuum could damage internal motor parts and lead to unacceptable high temperatures in the compressor housing.

5.11 Shell temperature

During normal operation, the top shell and discharge line can briefly but repeatedly reach temperatures up to 135 °C. Care must be taken to ensure that the wiring or other materials that could be damaged by these temperatures do not touch the shell.

5.12 Pumpdown cycle



WARNING

Vacuum operation! Creation of a flammable mixture! Fire hazard! During operation in vacuum a flammable mixture can form inside the system. Extreme attention shall be paid to system tightness. Prevent ambient air from entering the system. Pumping down outside the operating envelope or below atmospheric pressure is not allowed. If this happens, immediately stop the compressor and/or de-energize the power supply of the compressor.



CAUTION

Vacuum operation! Compressor damage! Compressor operation outside the operating envelope is not allowed.

A pumpdown cycle to control refrigerant migration may have to be used in conjunction with the crankcase heating function when the compressor is located outdoors without any housing so that cold air blowing over the compressor makes the crankcase heating function ineffective.

If a pumpdown cycle is used, a separate external check valve must be added. The scroll discharge check valve is designed to stop extended reverse rotation and prevent high-pressure gas from leaking rapidly into the low side after shut-off. The check valve will in some cases leak causing the scroll compressor to recycle more frequently. Repeated short cycling of this nature can result in a low oil situation and consequent damage to the compressor. The low-pressure control differential has to be reviewed since a relatively large volume of gas will re-expand from the high side of the compressor into the low side after shutdown.

For pressure control setting, never set the low-pressure control to shut off outside of the operating envelope. To prevent the compressor from running into problems during such faults as loss of charge or partial blockage, the control should not be set lower than the minimum suction pressure allowed by the operating envelope.

5.13 Minimum run time

Emerson recommends a maximum of 10 starts per hour. There is no minimum off time because scroll compressors start unloaded, even if the system has unbalanced pressures. The most critical consideration is the minimum run time required to return oil to the compressor after start-up. To establish the minimum run time, a sample compressor equipped with a sight tube can be ordered from Emerson for oil return qualification and minimum oil level – see **section 2.6.2 "Oil filling and oil level"**. Install it in a system with the longest connecting lines that are approved for the system. The minimum on time becomes the time required for oil lost during compressor start-up to return to the compressor sump and restore a minimal oil level that will ensure oil pick-up through the crankshaft. Cycling the compressor for a shorter period than this, for instance to maintain very tight temperature control, will result in progressive loss of oil and damage to the compressor.

5.14 Shut-off sound

Scroll compressors incorporate a device that minimizes reverse rotation. The residual momentary reversal of the scrolls at shut-off will cause a clicking sound, but it is entirely normal and has no effect on compressor durability.

5.15 Oil level

There is no oil sight glass on YBVH* compressors to ensure maximum hermeticity.

During the system development phase, adequate oil return in any operation should be checked whatever the compressor model. For this purpose, a sample compressor equipped with an external oil sight tube can be ordered from Emerson. Oil return check test recommendations are also available on request from the Application Engineering department at Emerson.

6 Maintenance & repair



WARNING

Conductor cables! Electrical shock! Follow the lockout/tag out procedure and the national regulations before carrying out any maintenance or service work on the system.

Use compressor with grounded system only. Screwed electrical connections must be used in all applications. Refer to original equipment wiring diagrams. Electrical connections must be made by qualified electrical personnel.

All electrical components could be a source of ignition and must always be switched off during service and maintenance.



WARNING

Air/flammable refrigerant mixture! Fire and explosion hazard! Remove all refrigerant before opening the system. Make sure to remove refrigerant completely from all components such as heat exchangers, refrigerant accumulators, etc. Flush the system and the components with inert gas before undertaking any work and before brazing.



WARNING

Open flame in a potentially flammable or explosive atmosphere! Fire and explosion hazard! The area shall be checked with an appropriate refrigerant detector prior and during work, to ensure the technician is aware of a potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants.

Personnel performing work on a refrigeration system that involves exposing the pipework shall avoid using any ignition source in a way that could lead to a fire or explosion hazard. All sources of ignition shall be kept sufficiently far from the site of installation, repair, removal or disposal during the entire time when refrigerant could be released into the surrounding space.

Open flames and smoking are strictly forbidden at all times.

During service make sure that:

- the area is well ventilated;
- the materials and equipment used are suitable for use under flammable conditions;
- only non-sparking tools are used;
- antistatic gloves and clothes are used;
- build-up of electrostatic charges is avoided;
- no unshielded or naked flame is used.

If parts of the refrigeration system are charged with flammable refrigerant, make sure that all the valves are tightly closed and that the open pipes after the valves are free of refrigerant and oil.

A risk analysis to evaluate all possible risks shall be carried out by the service technician before any repair work.

6.1 Qualification of workers

Personnel working on maintenance, repair and decommissioning shall be adequately trained. Any work procedure affecting safety shall only be executed by qualified and trained personnel in compliance with national or other equivalent certification systems.

Examples of such work procedures include:

- breaking into the refrigerating circuit;
- opening sealed components;
- opening ventilated enclosures;
- etc...

6.2 Preparation and work procedure

A work procedure shall be provided in the preparation stage. All maintenance staff and others working at the site shall be instructed on the nature of the work being carried out.

If any work is to be conducted on the refrigeration systems or any associated parts, appropriate fire extinguishing equipment shall be provided. Dry powder or CO₂ fire extinguishers are considered appropriate. Confirm that appropriate fire extinguishing equipment is available near the work area.

Prior to starting to work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized.

Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapour being present while the work is being performed.

Avoid working on systems filled with flammable refrigerant in a confined space.

6.3 Disassembling system components

When disassembling system components please follow the main steps described hereunder:

1. Recover refrigerant and evacuate system using an A3-dedicated recovery unit and vacuum pump. All the refrigerant shall be recovered to avoid significant release. Ensure that the outlet of the vacuum pump is not close to any potential ignition source and that ventilation is available.
2. Flush system with dry nitrogen. Compressed air or oxygen shall not be used for purging refrigerant systems.
3. Disassemble components with a cutting tool.
4. Drain, recover and dispose of compressor oil as appropriate.

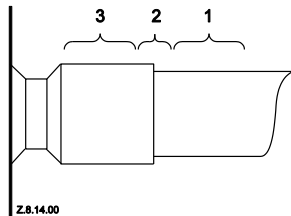


Figure 21: Tube connecting areas

To disconnect:

- Using a pipe cutting tool, cut off the suction and discharge lines in such a manner that the new compressor can easily be re-connected into the system.
- Heat joint areas 2 and 3 slowly and uniformly until the braze material softens and the tube end can be pulled out of the fitting.

To reconnect:

- Recommended brazing material: Silfos with minimum 5 % silver or silver braze used on other compressors.
- Due to the different thermal properties of steel and copper, brazing procedures may have to be changed from those commonly used.

NOTE: Since the discharge stub contains a check valve, care must be taken not to overheat it to prevent brazing material from flowing into it.

6.4 Replacing a compressor



CAUTION

Inadequate lubrication! Bearing destruction! For systems with a refrigerant accumulator, exchange the accumulator after replacing a compressor with a burned-out motor. The accumulator oil return orifice or screen may be plugged with debris or may become plugged. This will result in starvation of oil to the new compressor and a second failure.

Thoroughly remove the refrigerant and oil from the replaced compressor.

6.4.1 Compressor replacement

In the case of an R290 compressor replacement the oil has to be drained out of the compressor and the compressor should be flushed with dry nitrogen. DO NOT close the stubs with plugs.

In the case of a motor burnout, the majority of contaminated oil will be removed with the compressor. The rest of the oil is cleaned through the use of suction and liquid line filter driers. A 100 % activated alumina suction line filter drier is recommended but must be removed after 72 hours.

6.4.2 Start-up of a new or replacement compressor

Rapid charging only on the suction side of a scroll-equipped system can occasionally result in a temporary no-start condition for the compressor. The reason for this is that, if the flanks of the scrolls happen to be in a sealed position, rapid pressurisation of the low side without opposing high-side pressure can cause the scrolls to seal axially. As a result, until the pressures eventually equalise,


the scrolls can be held tightly together preventing rotation. The best way to avoid this situation is to charge on both the high and low sides simultaneously at a rate which does not result in axial loading of the scrolls.

A minimum suction pressure specified in the published operating envelope must be maintained during charging. Allowing the suction pressure to drop below that value may overheat the scrolls and cause early drive bearing and moving parts damage. Never install a system in the field and leave it unattended when it has no charge, a holding charge, or with the service valves closed without securely electrically locking out the system. This will prevent unauthorised personnel from accidentally operating the system and potentially ruining the compressor by operating with no refrigerant. **Do not start the compressor while the system is in a deep vacuum.** Internal arcing may occur when a scroll compressor is started in a vacuum causing burnout of the internal lead connections.

6.4.3 Compressor return procedure

If a compressor has to be returned to the manufacturer for analysis, the recommendations and procedure below shall be followed:

- During the entire working procedure continuously check if the ambient atmosphere is flammable or explosive. If a flammable or explosive atmosphere is detected, ensure proper ventilation of the working space and immediately cut-off the power supply.
- Resume working after the atmosphere is no longer dangerous.
- Recover the refrigerant from the system using a suitable recovery unit. During this action, the compressor crankcase heater could be energized – immediately de-energize in case a flammable or explosive atmosphere is detected.
- Do not allow the recovery unit to recover below atmospheric pressure. Make sure the low-pressure switch that stops the recovery process is not set below 0.5 bar(g).
- At this pressure some refrigerant will still be in the system. Therefore, before opening the system, pressurize to 1 bar(g) with dry nitrogen.
- Flush the whole system with oxygen-free dry nitrogen.
- Open the system with a cutting tool and flush the entire system with dry nitrogen again.
- Disassemble the compressor with a cutting tool. Drain and recover compressor oil properly. Flush the compressor with dry nitrogen again for a few minutes.
- The compressor should be returned free of oil and with connections open – do not close connections with plugs.
- Collect and secure the oil properly. Provide information about the quantity of oil drained from the compressor and its colour. Ideally, send a good picture.
- Dispose of the oil according to local rules and regulations.
- Use a proper cardboard box package when preparing the compressor for shipment. Place

warning icons  on each side and on the top of the box. Mention the following message on the box: **"Warning! Flammable A3-refrigerant compressor for analysis"**.

- The compressor box must be kept in the upright position – mark the box accordingly.
- If more than one compressor have to be returned, each compressor must be packed individually.

NOTE: Check with the transport company that all the requirements applying to such shipments are complied with.

6.5 Exchanging the refrigerant



WARNING

Air/R290 mixture in a potentially flammable or explosive atmosphere! Fire and explosion hazard! In any case avoid air/R290 mixture in the refrigeration system. Make sure that the system is filled with pure R290 refrigerant. In the event that the refrigerant needs replacing, the charge should be recovered using R290-qualified refrigerant recovery unit and recycling bottles.



CAUTION

Low suction pressure operation! Compressor damage! Do not operate with a restricted suction. Do not operate with the low-pressure limiter bridged. Do not operate compressor at pressures that are not allowed by the operating envelope. Allowing the suction pressure to drop below the envelope limit for more than a few seconds may overheat scrolls and cause early drive bearing and moving parts damage.

For qualified refrigerant and oil, see **section 2.6.1**.

It is not necessary to replace the refrigerant with new unless contamination due to an error such as topping up the system with a non-condensable gas or incorrect refrigerant is suspected. To verify correct refrigerant composition, a sample can be taken for chemical analysis. A check can be made during shutdown by comparing the refrigerant temperature and pressure using precision measurements at a location in the system where liquid and vapour phases are present and when the temperatures have stabilised. In the event that the refrigerant needs replacing, the charge should be recovered using a suitable recovery unit.

6.6 Lubrication and oil removal



WARNING

Air/R290 refrigerant mixture in a flammable or explosive atmosphere! Fire and explosion hazard! Use suitable recovery unit and recycling bottles also for oil disposal as R290 refrigerant may still be solved in the oil.



CAUTION

Chemical reaction! Compressor destruction! Do not mix up ester oils with mineral oil and/or alkyl benzene when used with chlorine-free (HFC) refrigerants.

The compressor is supplied with an initial oil charge. The standard oil charge for use with R290 is a polyolester (POE) lubricant Hatcol 4467. See nameplate for original oil charge shown in litres. A field recharge is from 0.05 to 0.1litre less.

One disadvantage of POE is that it is far more hygroscopic than mineral oil – see **Figure 22**. Only brief exposure to ambient air is needed for POE to absorb sufficient moisture to make it unacceptable for use in a refrigeration system. Since POE holds moisture more readily than mineral oil it is more difficult to remove it through the use of vacuum. The compressors supplied by Emerson contain oil with low moisture content, which may rise during the system assembling process. Therefore, it is recommended that a properly sized filter-drier be installed in all POE systems. This will maintain the moisture level in the oil to less than 50 ppm. If oil is charged into a system, it is recommended to use POE with a moisture content no higher than 50 ppm.

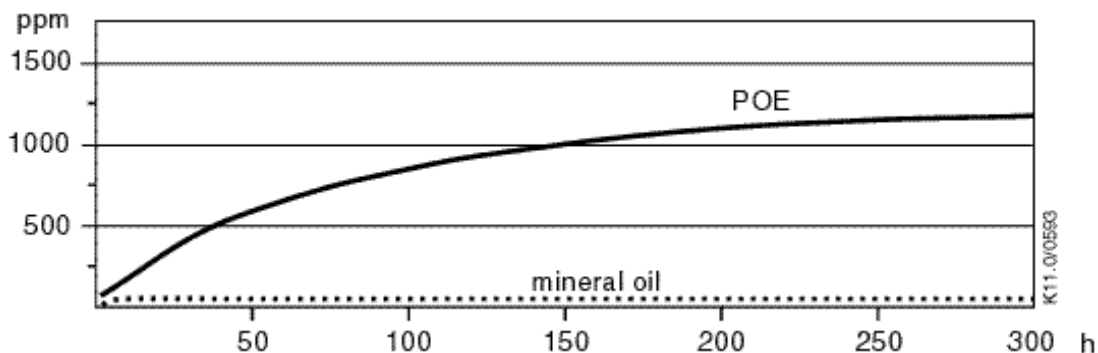


Figure 22: Absorption of moisture in ester oil in comparison to mineral oil in ppm by weight at 25 °C and 50 % relative humidity (h=hours)

If the moisture content of the oil in a refrigeration system reaches unacceptably high levels, corrosion and copper plating may occur. The system should be evacuated down to 0.3 mbar or lower. If there is uncertainty as to the moisture content in the system, an oil sample should be taken and tested for moisture. Sight glass/moisture indicators currently available can be used with the HFC refrigerants and lubricants; however, the moisture indicator will just show the moisture content of the refrigerant. The actual moisture level of POE would be higher than the sight glass indicates. This is due to the high hygroscopicity of the POE oil. To determine the actual moisture content of the lubricant, samples have to be taken from the system and analysed.

6.7 Oil additives

Although Emerson cannot comment on any specific product, from our own testing and past experience, we do not recommend the use of any additives to reduce compressor bearing losses or for any other purpose. Furthermore, the long-term chemical stability of any additive in the presence of refrigerant, low and high temperatures, and materials commonly found in refrigeration systems is complex and difficult to evaluate without rigorously controlled chemical laboratory testing. The use of additives without adequate testing may result in malfunction or premature failure of components in the system and, in specific cases, in voiding the warranty on the component.

7 Dismantling & disposal



Removing oil and refrigerant:

- Do not disperse in the environment.
- Use the correct equipment and method of removal.
- Dispose of oil and refrigerant in accordance with national legislation and regulations.

Dispose of compressor and drive in accordance with national legislation and regulations.

8 References

Please visit www.climate.emerson.com/en-gb for free download of Application Guidelines and Technical Information.

Performance and technical data:

The latest version of Copeland Select software with performance data and technical data is available from the webpage www.climate.emerson.com/en-gb.

Spare parts and accessories:

An online version of the Emerson spare parts and accessories software is available from the webpage www.climate.emerson.com/en-gb/tools-resources.

DISCLAIMER

1. The contents of this publication are presented for informational purposes only and are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability.
2. Emerson Climate Technologies GmbH and/or its affiliates (collectively "Emerson"), as applicable, reserve the right to modify the design or specifications of such products at any time without notice.
3. Emerson does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson product remains solely with the purchaser or end user.
4. Emerson does not assume responsibility for possible typographic errors contained in this publication.

BENELUX

Josephinastraat 19
NL-6462 EL Kerkrade
Tel: +31 45 535 06 73
Fax: +31 45 535 06 71
benelux.sales@emerson.com

GERMANY, AUSTRIA & SWITZERLAND

Theo-Mack Str. 3
DE-63477 Maintal
Tel: +49 6109 605 90
Fax: +49 6109 60 59 40
ECTGermany.sales@emerson.com

FRANCE, GREECE & MAGHREB

8, Allée du Moulin Berger
FR-69134 Ecully Cédex, Technoparc - CS 90220
Tel: +33 4 78 66 85 70
Fax: +33 4 78 66 85 71
mediterranean.sales@emerson.com

ITALY

Via Ramazzotti, 26
IT-21047 Saronno (VA)
Tel: +39 02 96 17 81
Fax: +39 02 96 17 88 88
italy.sales@emerson.com

SPAIN & PORTUGAL

C/ Pujades, 51-55 Box 53
ES-08005 Barcelona
Tel: +34 93 412 37 52
iberica.sales@emerson.com

CZECH REPUBLIC

Hajkova 22
CZ - 133 00 Prague
Tel: +420 733 161 651
Fax: +420 271 035 655
Pavel.Sudek@emerson.com

ROMANIA & BULGARIA

Parcul Industrial Tetarom 2
Emerson Nr. 4 400641 Cluj-Napoca
Tel: +40 374 13 23 50
Fax: +40 374 13 28 11
ro-bg.sales@emerson.com

ASIA PACIFIC

Suite 2503-8, 25/F., Exchange Tower
33 Wang Chiu Road, Kowloon Bay
Kowloon, Hong Kong
Tel: +852 2866 3108
Fax: +852 2520 6227

UK & IRELAND

Unit 17, Theale Lakes Business Park
Reading, Berkshire RG7 4GB
Tel: +44 1189 83 80 00
Fax: +44 1189 83 80 01
uk.sales@emerson.com

SWEDEN, DENMARK, NORWAY & FINLAND

Pascalstr. 65
DE-52076 Aachen
Tel: +49 2408 929 0
Fax: +49 2408 929 525
nordic.sales@emerson.com

EASTERN EUROPE & TURKEY

Pascalstr. 65
DE-52076 Aachen
Tel: +49 2408 929 0
Fax: +49 2408 929 525
easterneurope.sales@emerson.com

POLAND

Szturmowa 2
PL-02678 Warsaw
Tel: +48 22 458 92 05
Fax: +48 22 458 92 55
poland.sales@emerson.com

RUSSIA & CIS

Dubininskaya 53, bld. 5, 4th floor
RU-115054, Moscow
Tel: +7 499 403 64 03
ECT.Holod@emerson.com

BALKAN

Selska cesta 93
HR-10 000 Zagreb
Tel: +385 1 560 38 75
Fax: +385 1 560 38 79

MIDDLE EAST & AFRICA

PO Box 26382
Jebel Ali Free Zone - South, Dubai - UAE
Tel: +971 4 811 81 00
Fax: +971 4 886 54 65
mea.sales@emerson.com

For more details, see www.climate.emerson.com/en-gb
Connect with us: facebook.com/EmersonCommercialResidentialSolutions



Emerson Commercial & Residential Solutions
Emerson Climate Technologies GmbH - Pascalstrasse 65 - 52076 Aachen, Germany
Tel. +49 (0) 2408 929 0 - Fax: +49 (0) 2408 929 570 - Internet: www.climate.emerson.com/en-gb

The Emerson logo is a trademark and service mark of Emerson Electric Co. Emerson Climate Technologies Inc. is a subsidiary of Emerson Electric Co.
Copeland is a registered trademark and Copeland Scroll is a trademark of Emerson Climate Technologies Inc. All other trademarks are property of their respective owners.
Emerson Climate Technologies GmbH shall not be liable for errors in the stated capacities, dimensions, etc., as well as typographic errors. Products, specifications, designs and technical data contained in this document are subject to modification by us without prior notice. Illustrations are not binding.

© 2019 Emerson Climate Technologies, Inc.

EMERSON. CONSIDER IT SOLVED.™